
Sensor setting for different labels


For **label with gap** you can use Transmissive sensor(See-through) or Reflective sensor to detect it.


EXP:

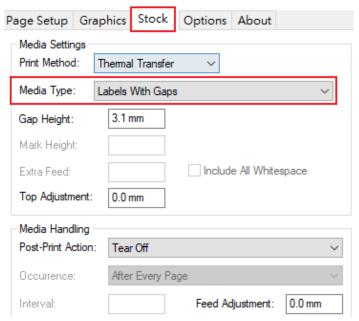





For **black mark labels** you have to select reflective sensor and move it to match up label's mark.

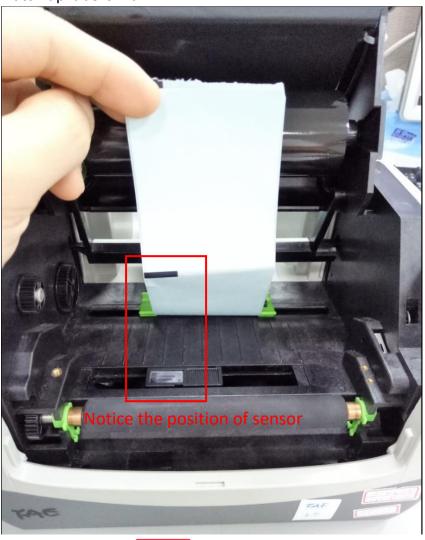

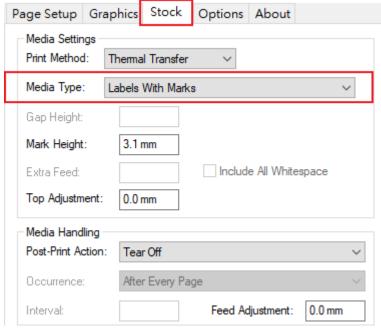

For **multi-column labels** you have to select reflective sensor and move it away from middle line.

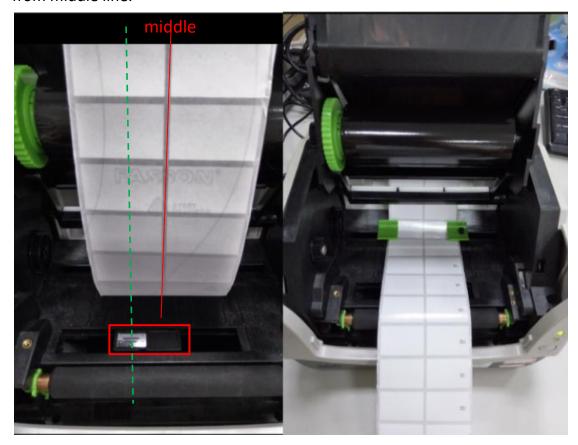

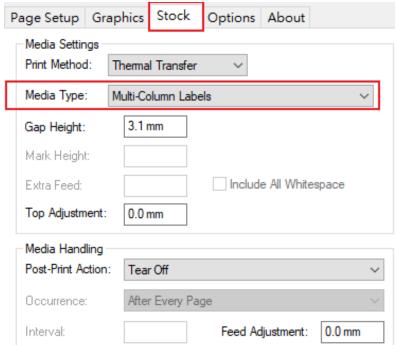


***If there is no Multi-column option in the driver, please select label with mark as alternative.

If it has a longer detective point on labels like wristband. You have to select reflective sensor and adjust the calibration length by printer utility.

EXP: The length of wristband is 300mm. So the calibration length must be 3 times high than your label. Therefore, I adjust the calibration length to 900mm

high.



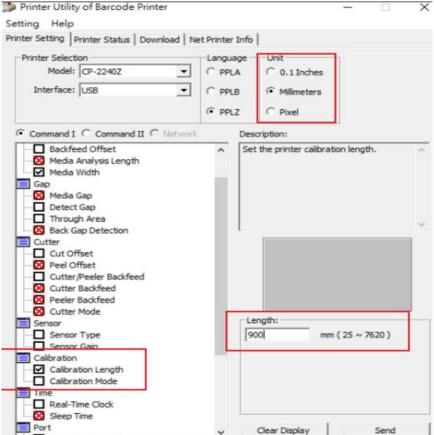

How to check your setting?

There are two ways that you can check your sensor type and you can select one of them alternatively.

- 1. You can print out the "self-test" from printer, or
- 2.Use printer utility this software to check it.

