

How to set Backfeed Disable for Printer

For PPLA & PPLB

- 1. Entry into Windows Control Panel\All Control Panel Items\Devices and Printers
- 2. Right click the Printer Driver icon and choose "Printing preferences" .



3. Click [Stock] label then choose Media Handling\Post-Print Action as None Off and press

[OK] button.	Page Setup Graphics Stock Options About
	Media Settings Print Method: Thermal Transfer ~
	Media Type: Labels With Gaps 🗸
	Gap Height: 3.0 mm
	Mark Height:
	Extra Feed: Include All Whitespace
	Top Adjustment: 0.0 mm
	Media Handling
	Post-Print Action: None
	Occurrence: lear Off
	Interval:
	OK Cancel Apply Help





For PPLZ

- 1. Entry into Windows Control Panel\All Control Panel Items\Devices and Printers
- 2. Right click the Printer Driver icon and choose "Printing preferences" .
- 3. Click [Stock] label and choose Feed mode as Use Current Printer Setting.

	See what's printing Set as default printer
	Printing preferences
000	Printer properties
Argox 04-250 PPLZ	Create shortcut
	Remove device
	Troubleshoot
	Properties

Media Settings Print Method: Media Type:		Thermal Transfer			~
		Non Continuous (Web Sensing) 🛛 🗸 🗸			
Gap Height:	3.04				
Feed Mod	de				
Mode:	Us	e Current Printer Setting	~	Pause /	After Cut
Pause:	No	Pause	~	Interval:	
Feed Opt	ions		-61		
Set To	op Adj	ustment:			
Set 16	ear-Off	Adjustment:	_		

- 4. Click [Page Setup] label then press [Advanced Options] button.
- 5. Click [Page Setup] label, click Start of Label and choose Function Character as None. Input Command ^XB include an Enter as below then press [OK] button.

Stock Name:	USER (101.6 mm)	x 152.4 mm)	~	User Commands	7	(10)
	New	Edit	Delete	Start of Label		0
	Portra Oteritatio Portra Oteritatio	sit scape sit 180° scape 180°	Mirror Image	Function Character: The function character commands and bar coo	None Insert control characters in both u le fonts.	rt) ser
Preset Name:	<current settings=""></current>		Manage			
		Ad	vanced Options	ОК	Cancel Apply H	Help

