

AS-8050 設定調整掃描時音量

Adjust the buzzer volume on AS-8050.

1. 請先至 **Argox** 官網下載使用手冊。

Please download User's Manual from Argox official website as below.

<http://www.argo.com/zh-hant/product/as-8050/>

ARGOX a hant company

PRODUCTS ▾ SOLUTIONS ▾ DOWNLOAD ▾ SUPPORT & SERVICES ▾ NEWS PARTNER AREA 語言 ▾ Q

PRODUCTS > BARCODE SCANNERS > 1D STANDARD RANGE IMAGERS > AS-8050

SEARCH PRODUCTS

Search... Q

PRODUCT CATEGORIES

Barcode Printers ▾

Barcode Scanners ▴

- 1D Cordless Imagers
- 1D Standard Range Imagers**
- 1D Long Range Imagers
- 1D Contact/Short Range Imagers
- 2D Barcode Imagers
- 2D Cordless Barcode Imagers
- 2D Presentation Scanners

Mobile Computers ▾

Discontinued Products ▾

PRODUCT TAGS

AS-8050

Model List: AS-8050

- Fast 1D barcode reading.
- Up to 3mil reading capacity.
- Easy to read screen barcodes.

Compare

Category: 1D Standard Range Imagers

INFORMATION GENERAL SPECIFICATIONS BROCHURE **USER MANUAL** DRIVERS

USER MANUAL
AS-8050 user manual EN

↓ DOWNLOAD FILE

2. 請依下列步驟，掃描使用手冊 P.21 的條碼設定。
Please follow the instruction as below in User's Manual on P.21.

4.3 Buzzer & LED control

Data format:

Length	Message Source	Message target	Reserve	Opcode	Command	beeper	Check Sum
0x0B	0x04	0x31	0x00	0x50			

Command:

	1.	%SET	
		Disable boot buzzer	B0000 
		*Enable boot buzzer	B0001 
		Disable good read buzzer	B0100 
		*Enable good read buzzer	B0101 
		Buzzer volume: low 低	B0200 
2.		*Buzzer volume: Medium 中	B0201 
		Buzzer volume: high 高	B0202 
		Disable barcode set buzzer	B0300 
		*Enable barcode set buzzer	B0301 
	3.	%END	