

How to set the Auto Enter after scan on PT-90 Series

Question :

How can I use PT-6020 on Windows Server 2012 R2? The driver for Win 8,7,XP from your web pages is not compatible. Do you have the proper driver?

Model Applies to:

PT-90 Series

Answer:

Steps:

1. Please go to **Scan Configuration** function on the terminal, you can find it on desktop **Utility** folder.

Then you will find the setting page as below:

Scan Configuration [OK] [X]

General | Setting 1 | Setting 2 | Barcode

Transmission

Code ID: Pre-Defined [Clear]

Code ID position: Before [v]

Transmit AIM ID

Prefix: [] [View]


Suffix: [] [View]

Power Saving

ScanTimeout (1~30sec): 2

IdleTimeout (0~255Sec): 5

2. Click the **View** button on the **Suffix** (see the red mark on above photo)
3. Then you will find Char1~Char10.

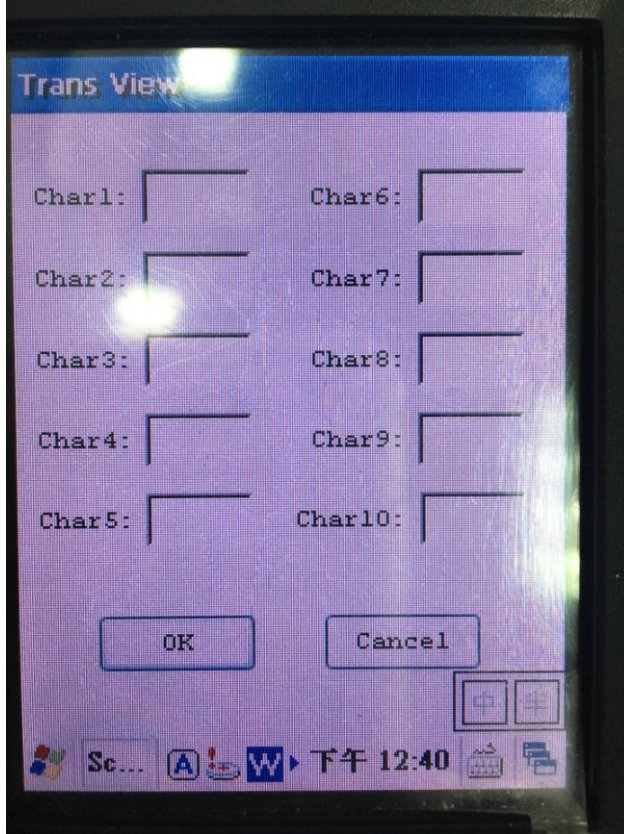

4. Just key in **lx0d** into the Char1.