Keypad and function button

- 1. Scan key
- 2. Cursor key
- 3. Control Kev
- 4. Numeric kevs
- 5. Power key
- 6. User-defined kevs

Alpha key

Switches between the character input mode and the number input mode [abc][ABC] lit on the LCD screen indicates the character input mode. When [123] is lit, the terminal is in the number input mode.

Control Key

ESC: The Escape kev ENT: The Enter key BS: The Backspace key

Fn kev:

- ► Fn+Down: Adjust the backlight brightness
- ► Fn+Left: Reduce the volume
- ► Fn+Right: Increase the volume

Reset Key

Power key + Scan key: Warm / Software reset

Power key + Scan key(6 sec up): Cold / Hardware reset

PI-1010/PI-1030 EN 300 328 BT RF Power EIRP 1.92 dbm PI-1030 EN 300 328 WIFI RF Power EIRP 19.04 dbm

Argox Information Co., Ltd.

7F., No.126, Ln.235, Baogiao Rd.,

Xindian Dist., New Taipei City 231, PI-1010 FN 300 328 BT RF Power FIRP 1.92 dbm PI-1030 FN 300 328 BT RF Power FIRP 1.92 dbm Taiwan (R.O.C.) PI-1030 EN 300 328 WIFI RF Power EIRP 19.04 dbm Tel: +886-2-8912-1121

Fax: +886-2-8912-1124

49-PI101-002

http://www.argox.com

See User Manual for more information

Rev. A - May, 2018 Copyright @ 2016, Argox Information Co., Ltd, All Rights Reserved.



PI-1000 Series Mobile Computer Ouick Start Guide

Depending on the configuration ordered, the PI-1000 Series shipping container may include:







Ouick Start Guide

Hand strap







RS-232 Cable with USB power cord








Plug and Power Supply (Accessory)

Attach the hand strap

- Pinch the small loop and thread it into the two square holes under the battery cover. Insert the handle of the strap in the thin loop.
- 2. The strap is fixed to the terminal. Hold the hand strap around the wrist when carrying the terminal.



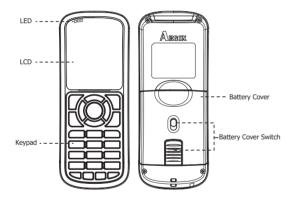





First time initiation of this product; please make sure insert fully charged battery for at least 24 hours to ensure backup battery properly charged.

Install or replace battery in the terminal



- 1. Two AA batteries. Recommended alkaline rechargeable type.
- A fully charged backup battery can maintain memory (RAM) contents for about 15 minutes, even when the battery pack is removed. Turn off the terminal to replace battery under 15 minutes.
- 1. Press and slide two release latch at the same time to open the battery cover.



2. Inserting batteries and close the battery cover as follow.



3. Make sure cover is closed and slide two latch back.

